 
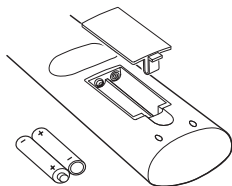 


# TOSHIBA

## Simple at-a-glance reference of your remote control

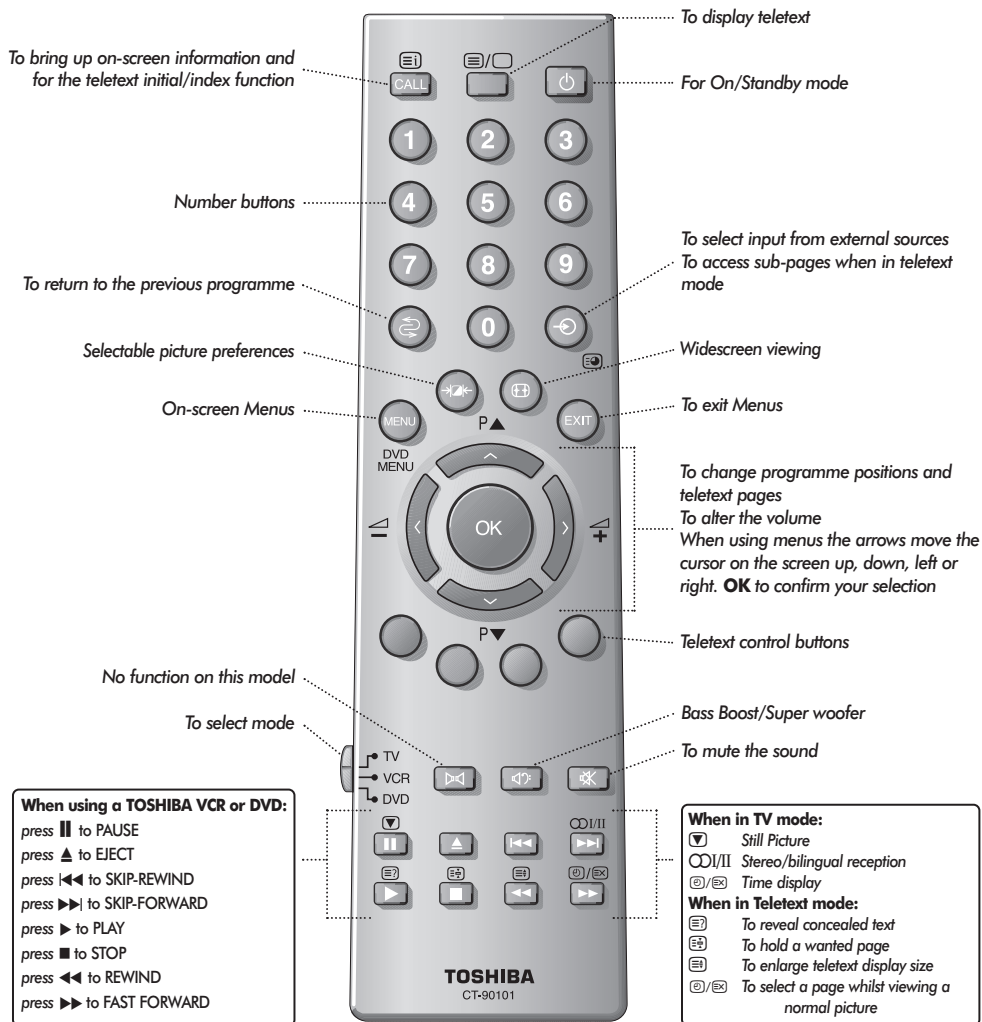

Remove the back cover to insert the batteries, make sure they are inserted the right way round.

Suitable battery types for this remote are:  
UM-4, AAA, IEC R03 1.5V.

 


Printed on recycled paper.  
100% Chlorine free.

# TOSHIBA


## Auto Tune – WH46 Series

- 1 Plug the aerial directly into the AERIAL INPUT on the television set.
- 2 Connect the television to the mains. If the power-on light is unlit press the **ON/OFF** button on the front of the set.
- 3 Press **button 1** on the remote control.
- 4 Press the **MENU** button, and use **<** or **>** button to select **SET UP** from the top bar.
- 5 Press the **✓** button to highlight **Auto tuning**.
- 6 Then the **>** button to select the **Auto tuning** screen.

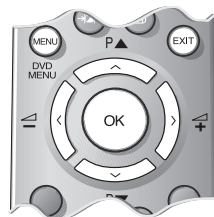

*You will be informed that all previous settings will be lost.*

 
- 7 Press the **OK** button to begin the search for available signals.
- 8 **▶▶▶** will flash and the bullet will move along the line as the search progresses.

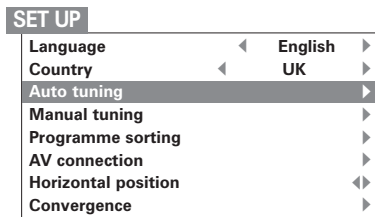

**EXIT** : To exit

*You must allow the television to complete the search.*

 When the search is complete the TV will automatically return to programme position 1.

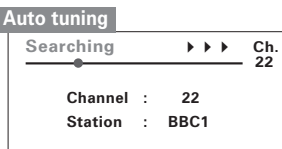

**EXIT** : To exit

Auto tuning is now complete. To select programmes press the number buttons.

In some areas of the UK duplicate TV stations are received, if the Autosort has put these in adjacent numbers e.g. BBC1 in positions 1 and 2, simply re-order using the Programme Sorting feature. For details of this and further operations plus equipment connections please refer to the TV Owner's Manual.