



I402

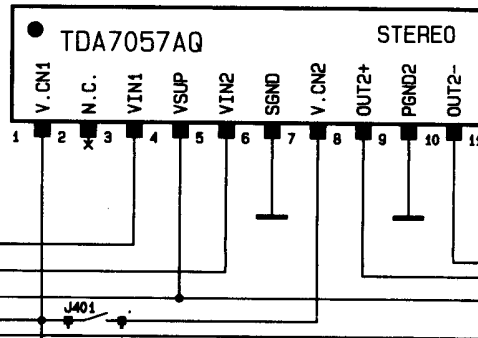








I302

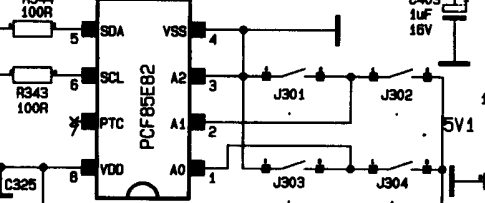


AGC

I101
 TDA8362
 (PAL/SECAM)

TDA8361 (PAL)

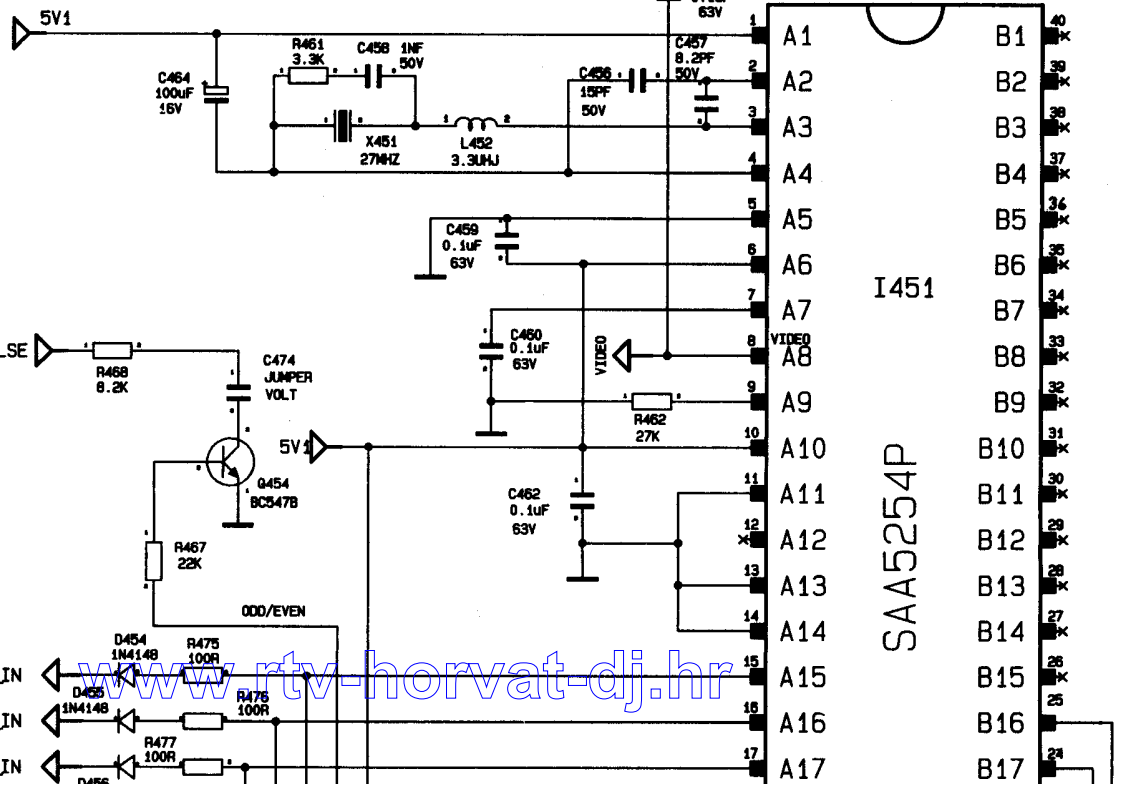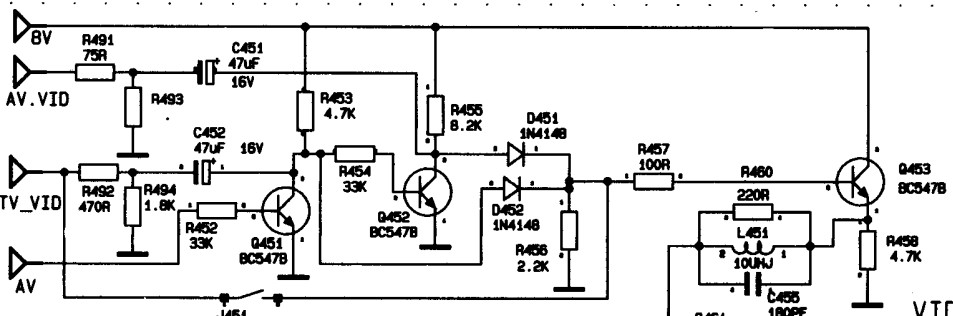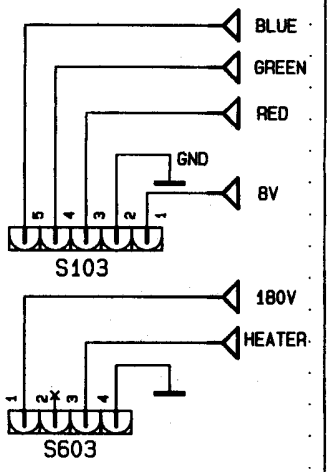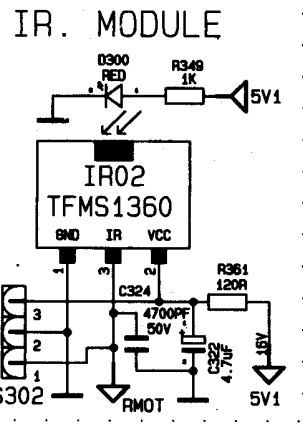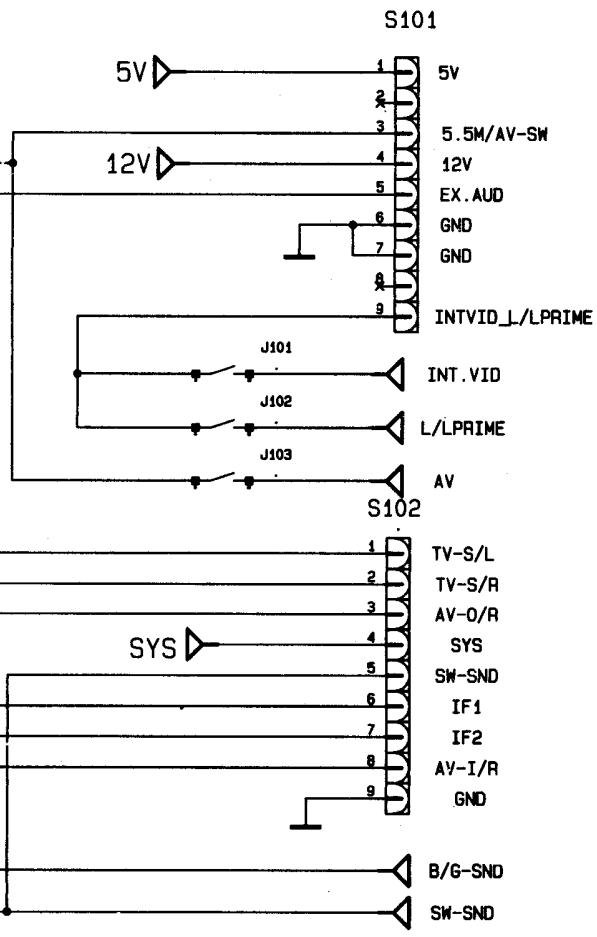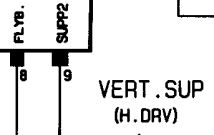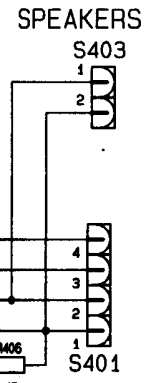


www.rtv-horvat-dj.hr

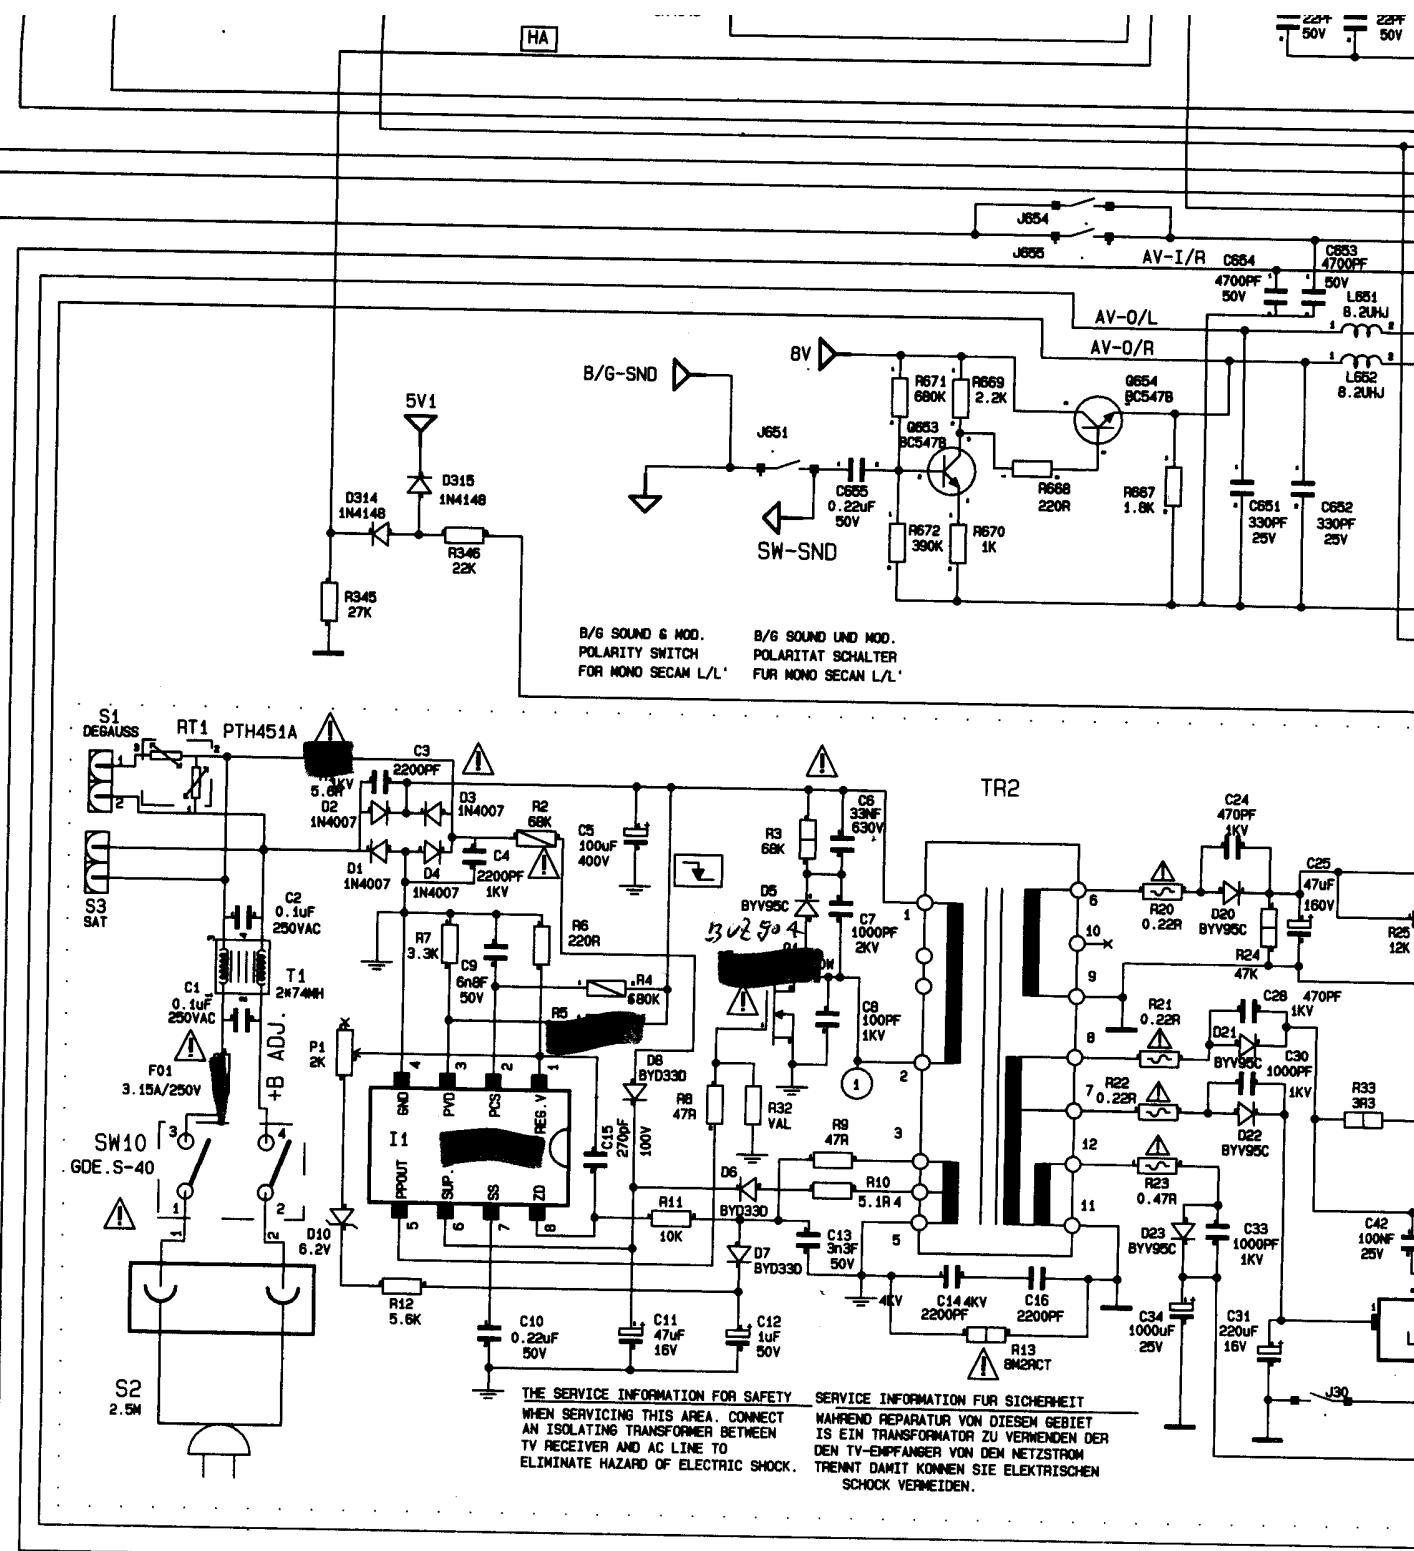

100 volt/div




2) 20 usn/div 2volt/div

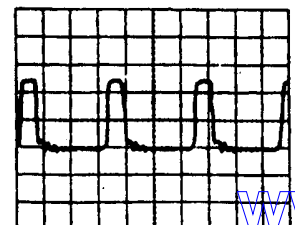


IC 301 pin 26

3) 5m sn/div 2volt/div

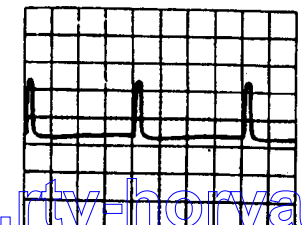


IC 301 pin 27

4) 5 msn/div 0,5 volt/div



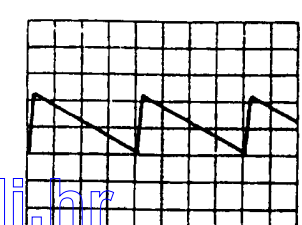


IC 101 pin 41

5) 5 msn/div

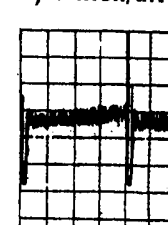



IC 601 pin 3

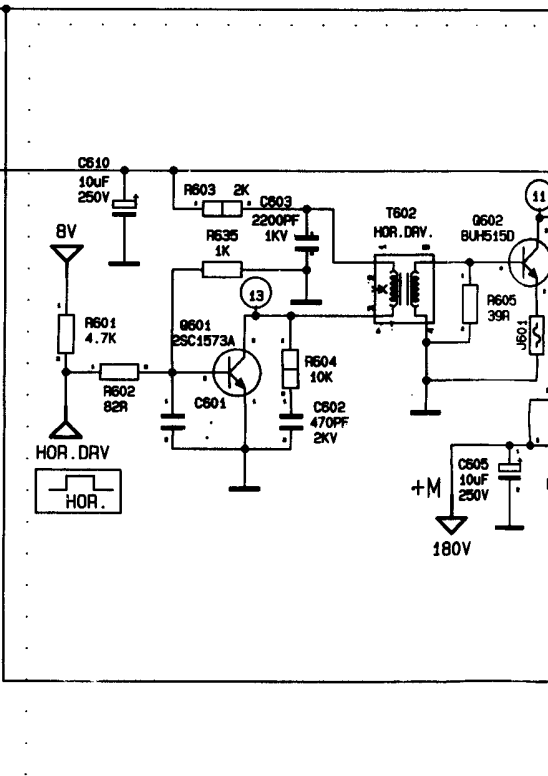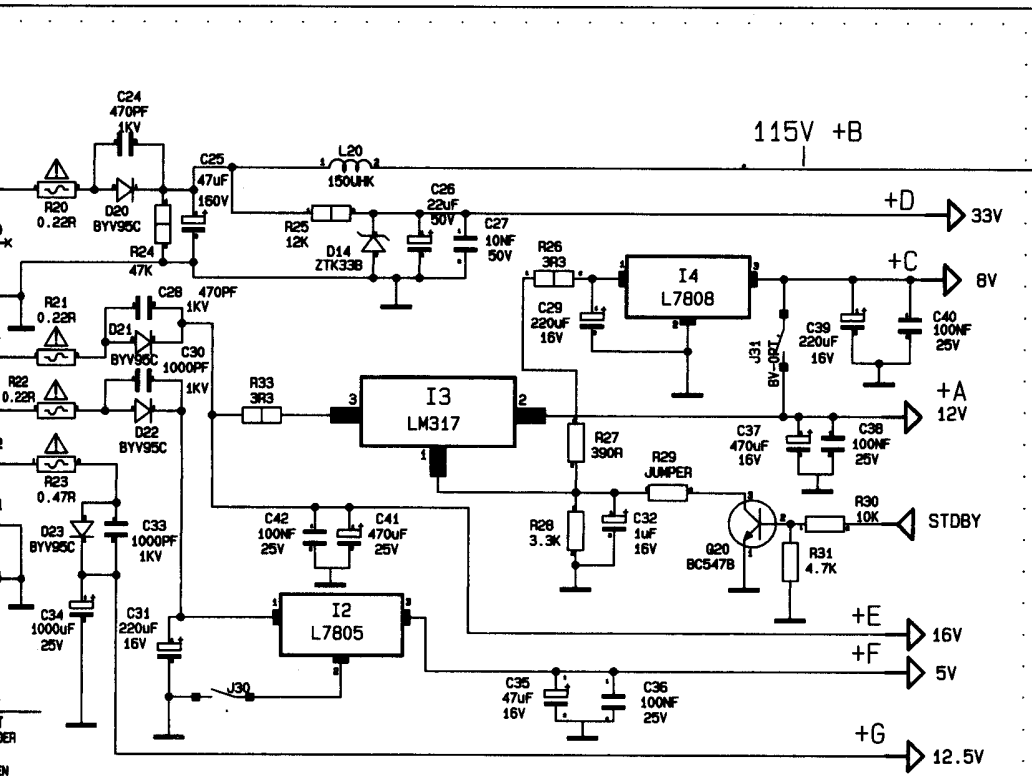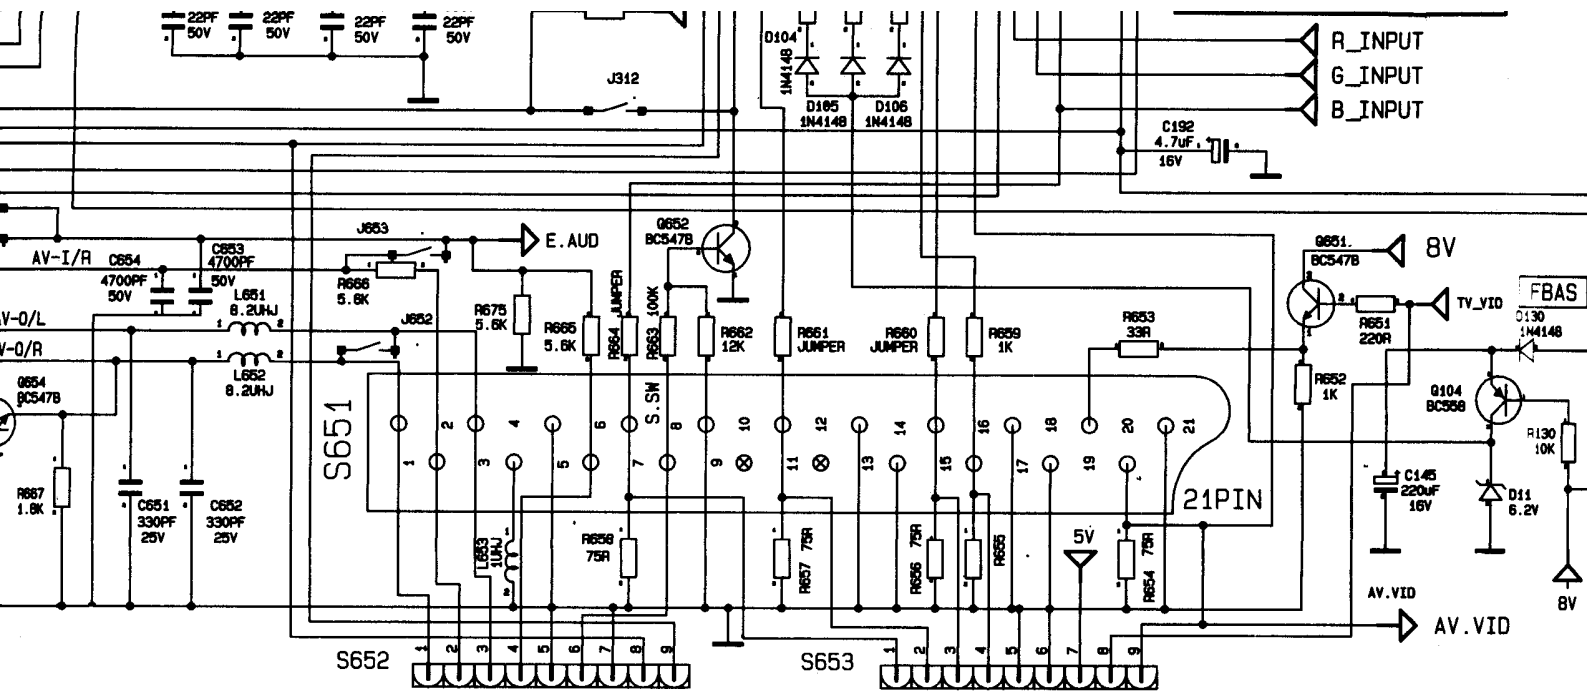


AV-O/R
 AV-O/L
 AV-I/R
 EX. AUD

OSCILLOSCOPE SHAPES / OSZ

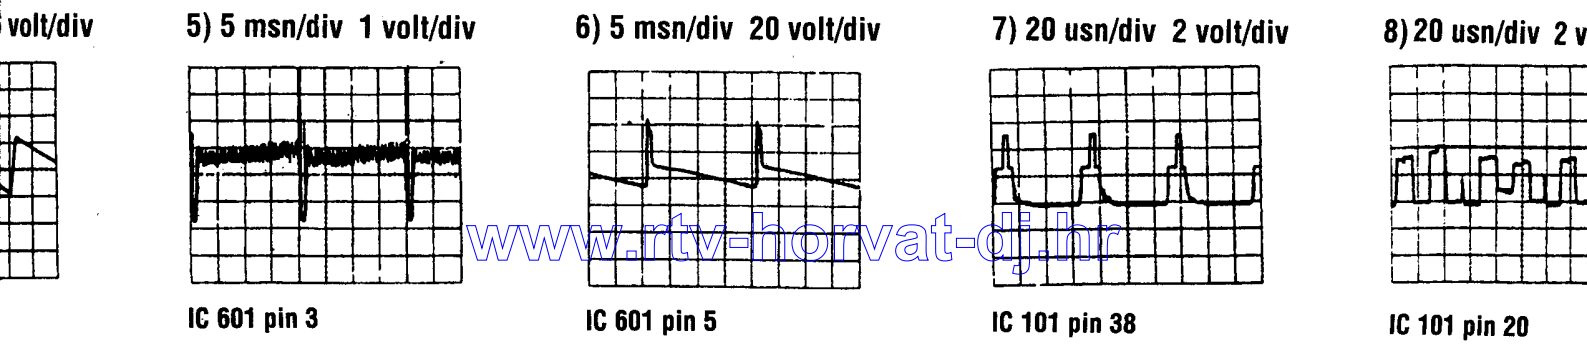


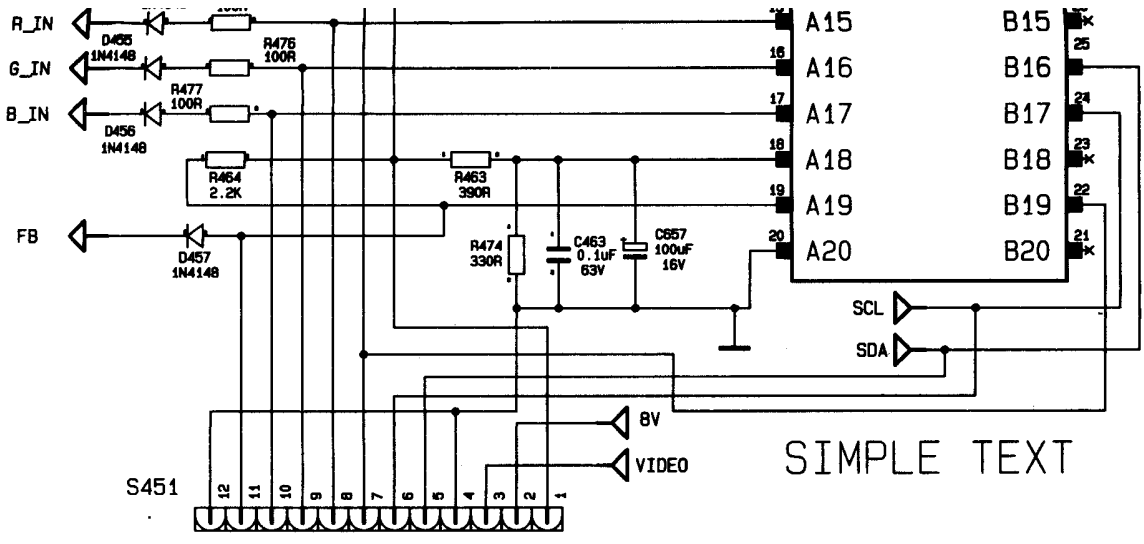

SIMPLE TEXT

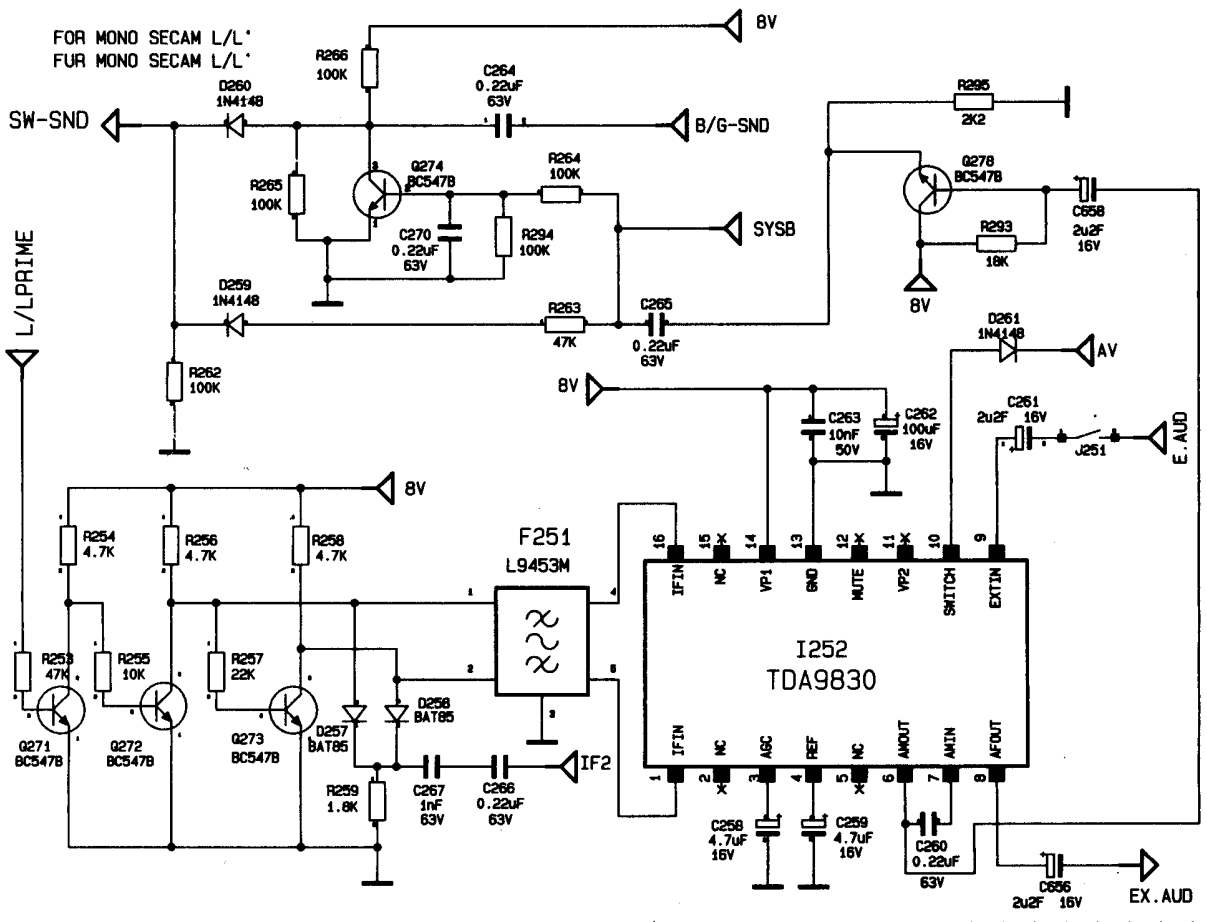


10) 10 usn/div 250 volt/div

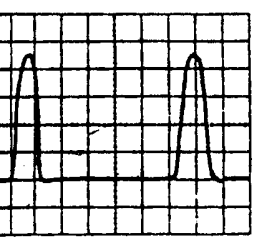


Collector of Q602

12) 20 usn/div 0.2 volt/div

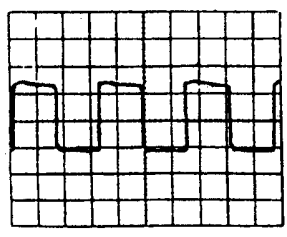


IC 101 pin 37

13) 20 usn/div 50 volt/div

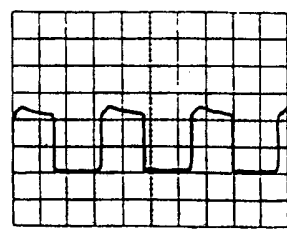


Collector of Q601


14) 20 usn/div 1 volt/div

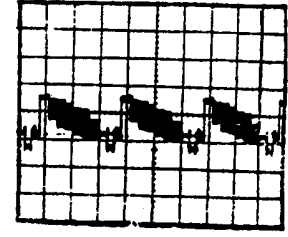

IC 101 pin 13

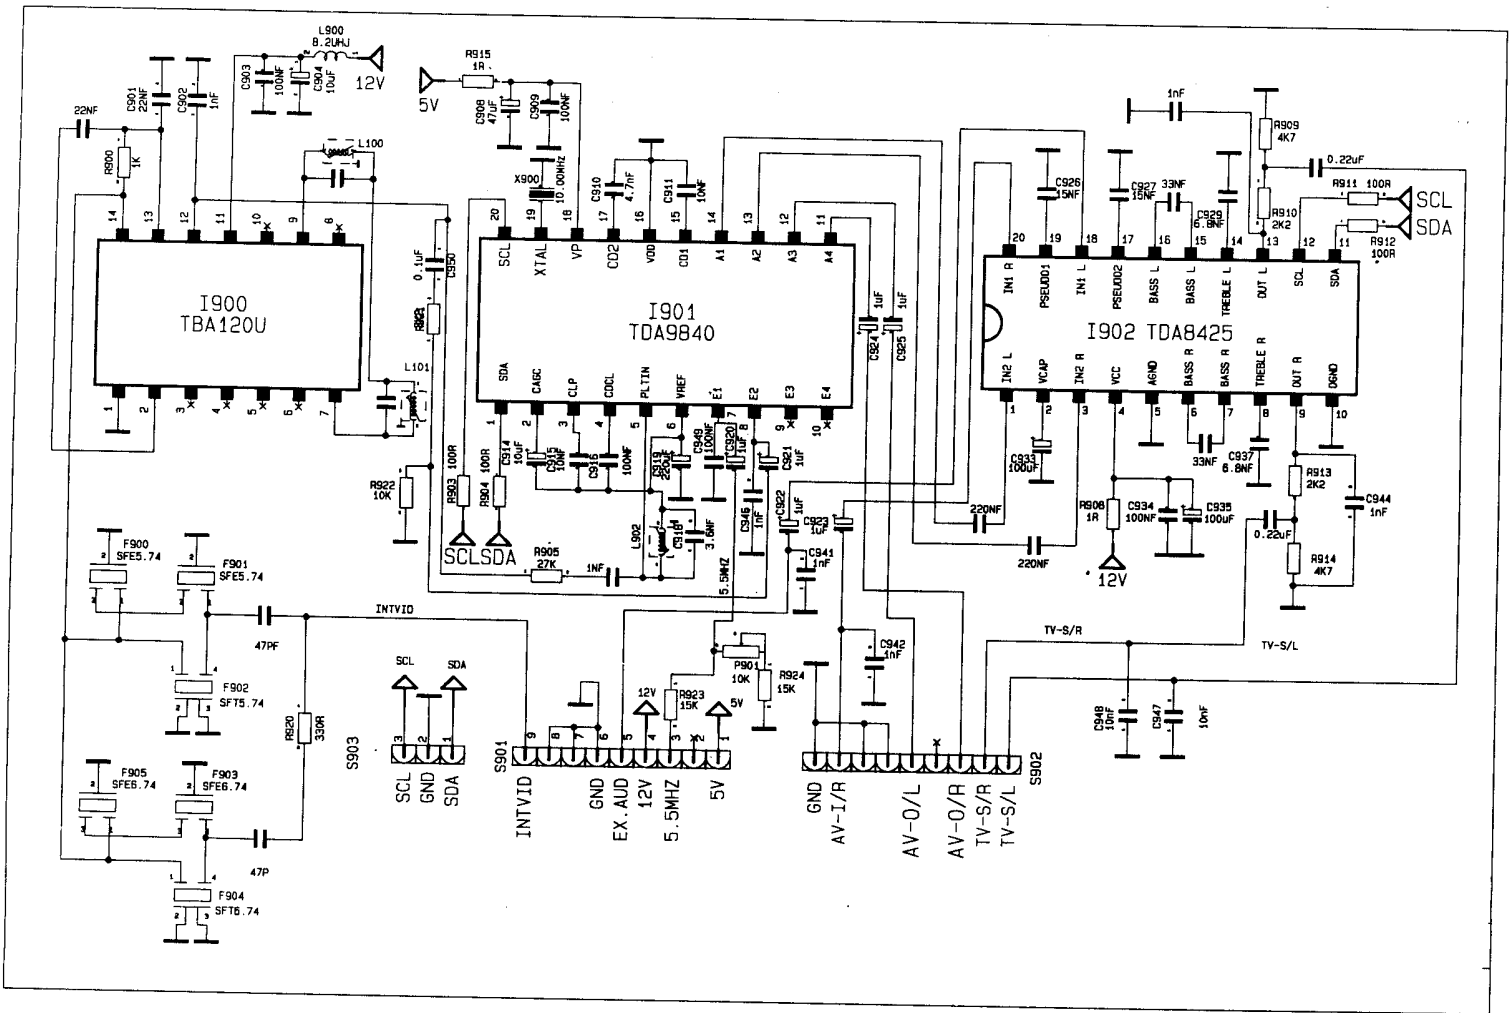

GERMAN STEREO BOARD CIRCUIT DIAGRAM / GERMAN STEREO BAUSTEIN SCHALTUNGSPLAN

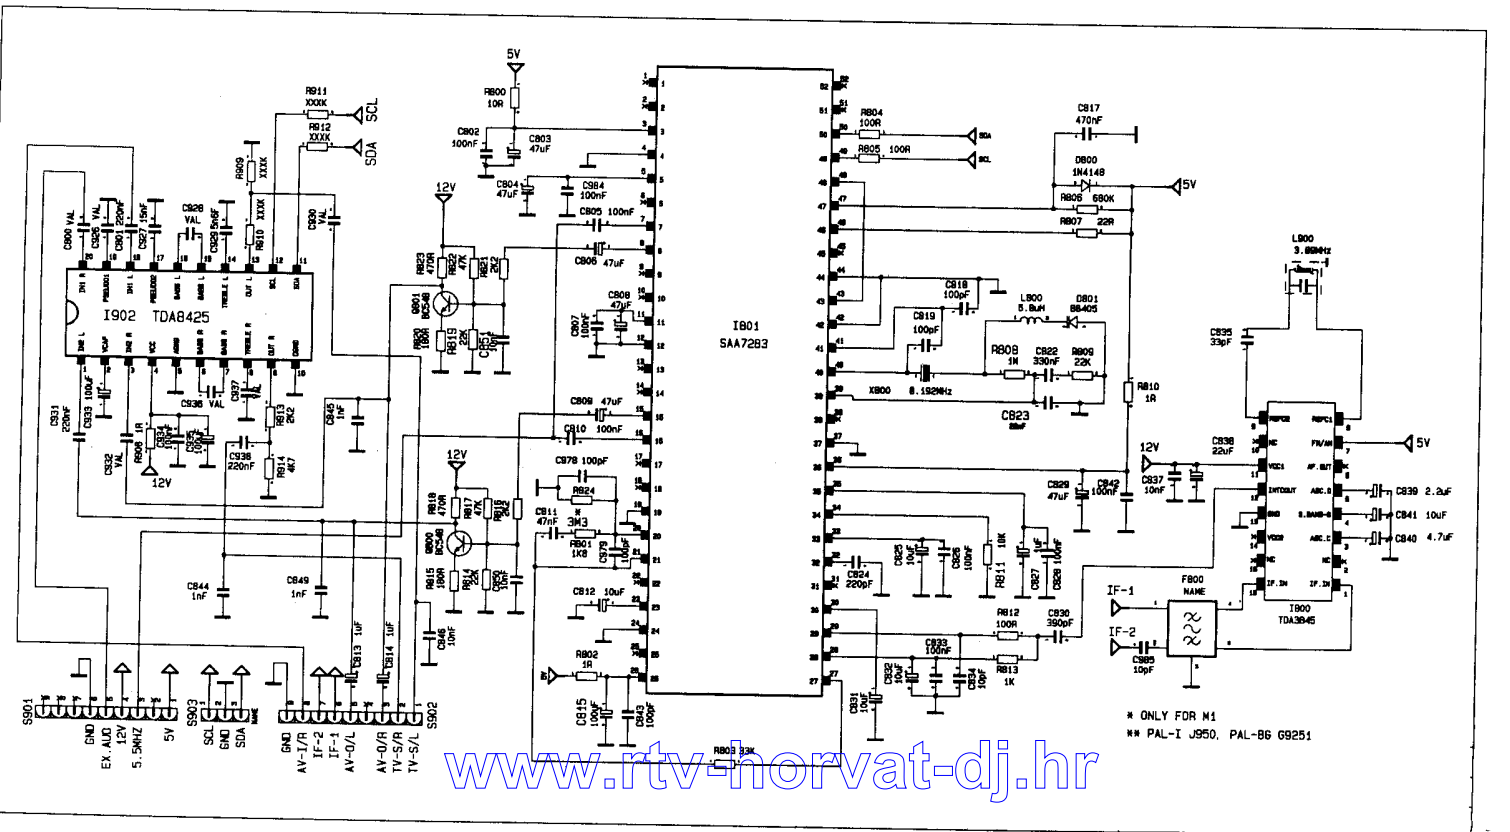


www.rtv-norvat-dj.hr

NICAM BOARD CIRCUIT DIAGRAM / NICAM BAUSTEIN SCHALTUNGSPLAN


RTV servis Horvat
 Kešinci, 31402 Semeljci
 Tel: 031-856-637
 Tel/fax : 031-856-139
 Mob: 098-788-319

rtv-servis-horvat@os.tel.hr

Croatia

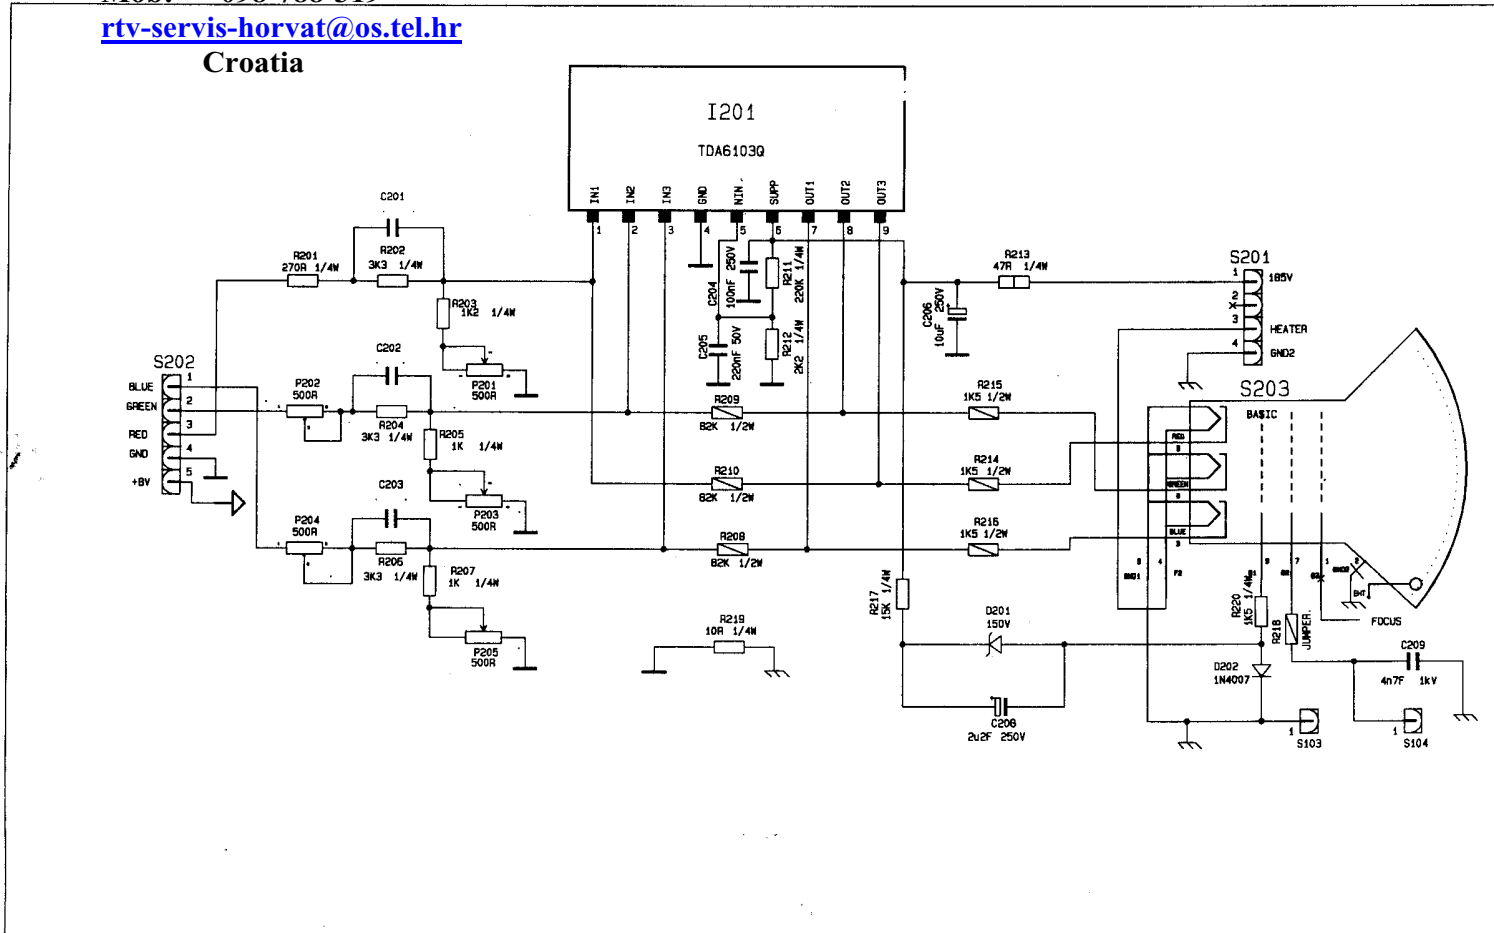


CRT BOARD CIRCUIT DIAGRAM / CRT BAUSTEIN SCHALTUNGSPLAN

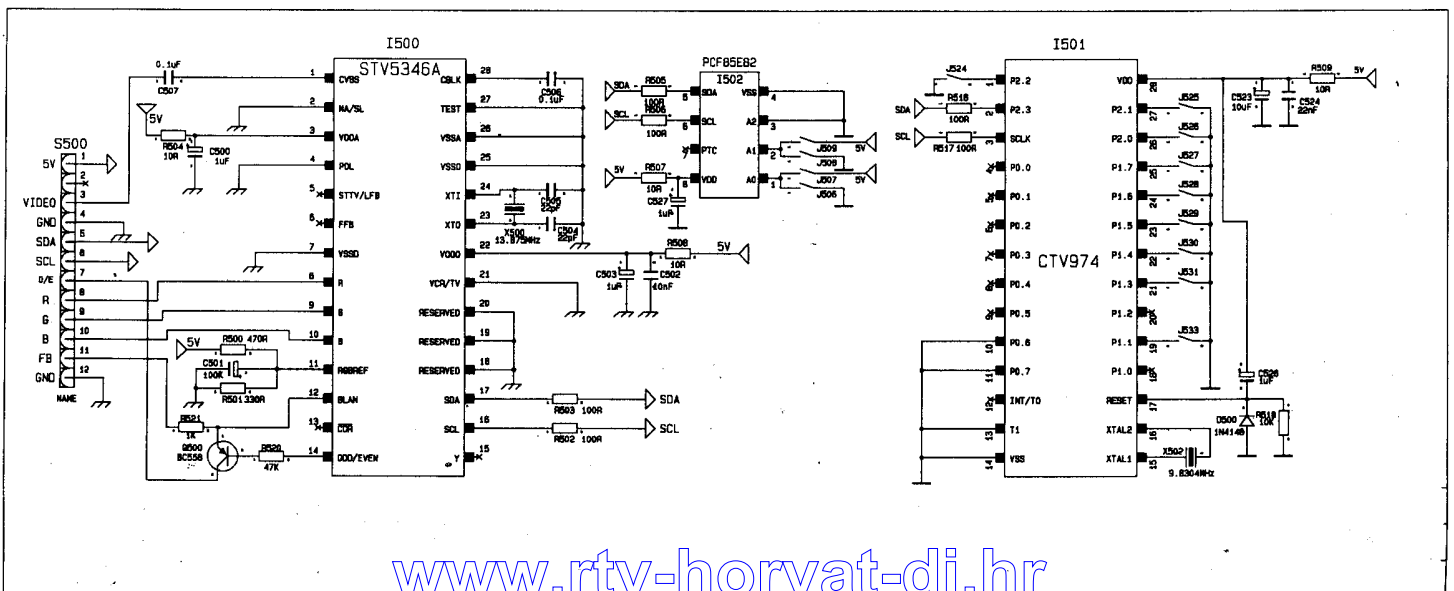

www.rtv-horvat-dj.hr

TELETEXT BOARD CIRCUIT DIAGRAM / TELETEXT BAUSTEIN SCHALTUNGSPLAN

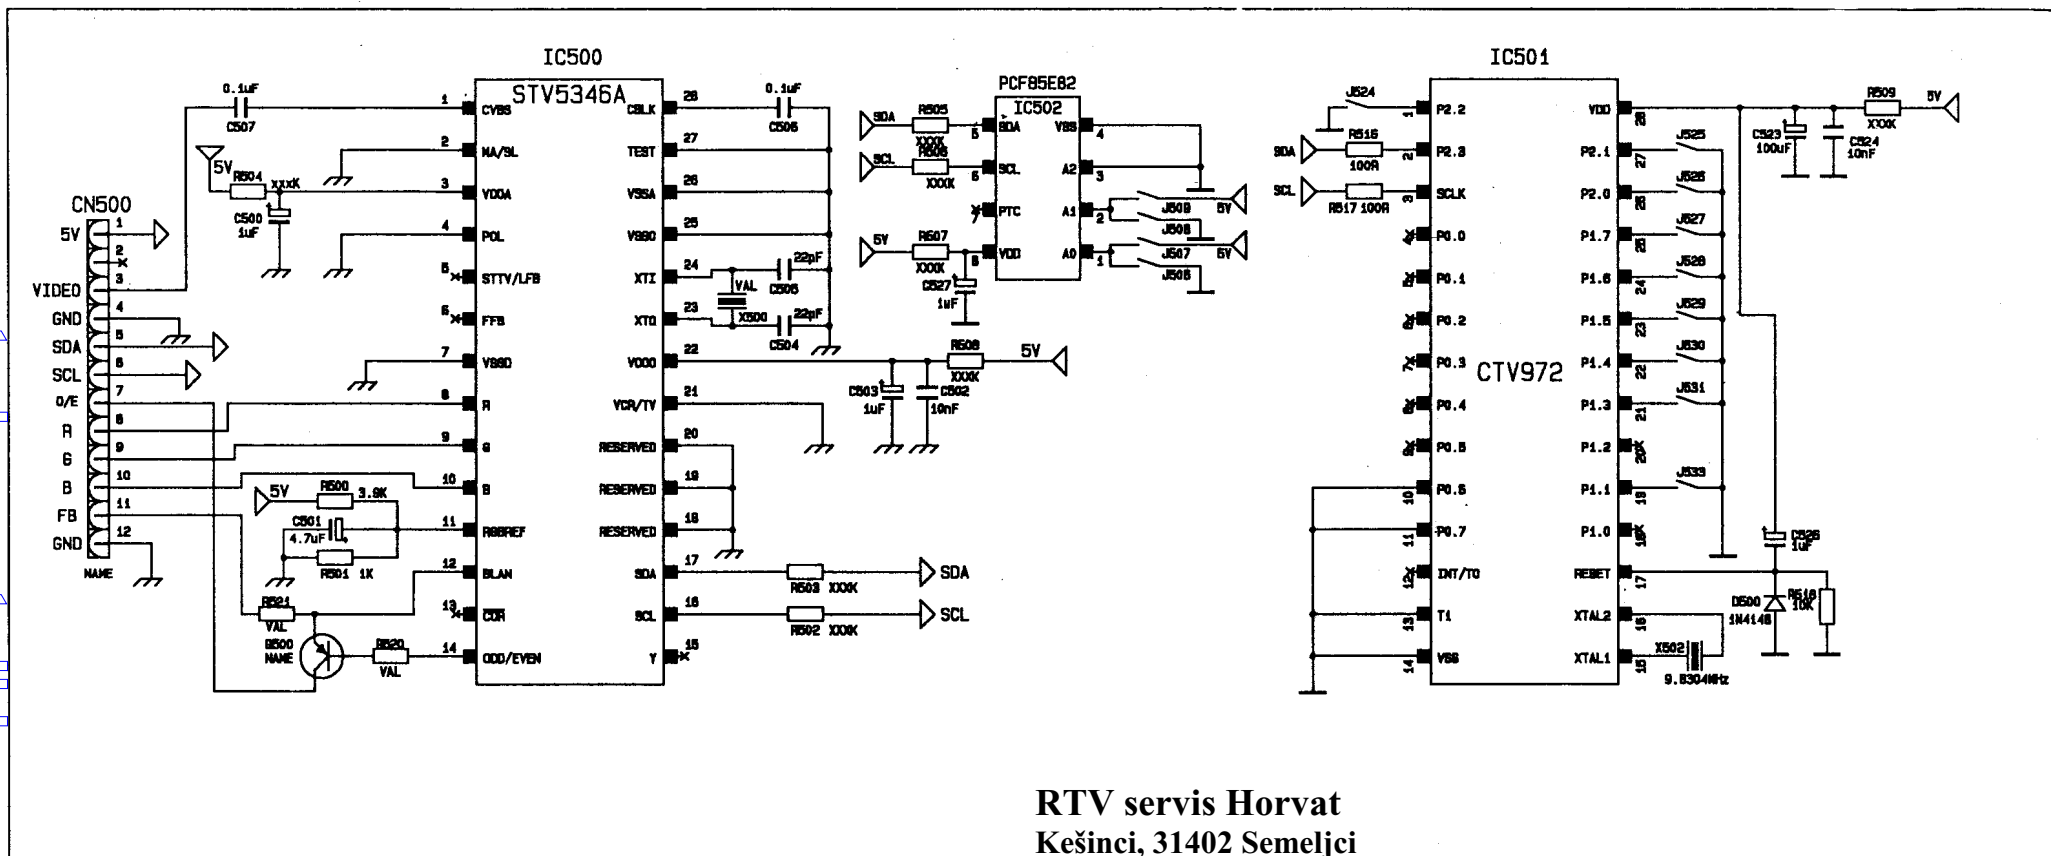

FASTTEXT BOARD CIRCUIT DIAGRAM / FASTTEXT BAUSTEIN SCHALTUNGSPLAN

RTV servis Horvat
Kešinci, 31402 Semeljci


Tel: 031-856-637

Tel/fax : 031-856-139

Mob: 098-788-319

rtv-servis-horvat@os.tel.hr

Croatia

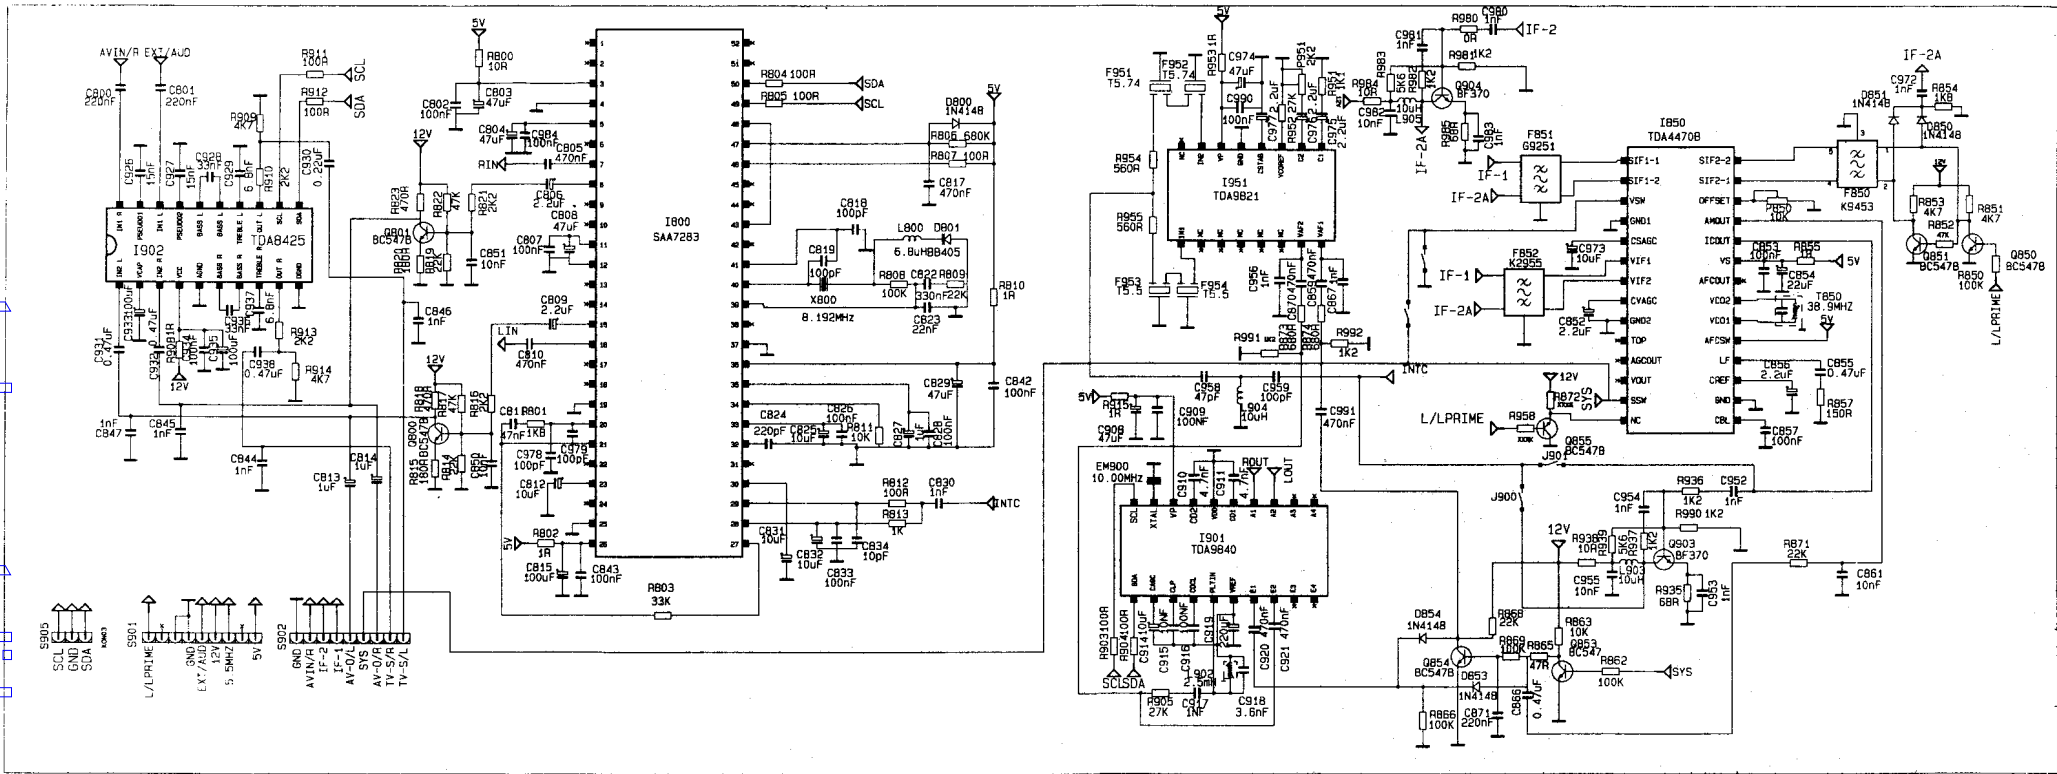


A2+NICAM L BOARD CIRCUIT DIAGRAM / A2+NICAM L BAUSTEIN SCHALTUNGSPLAN

RTV servis Horvat
 Kešinci, 31402 Semeljci
 Tel: 031-856-637
 Tel/fax : 031-856-139
 Mob: 098-788-319

rtv-servis-horvat@os.tel.hr

Croatia


www.rtv-horvat-dj.hr

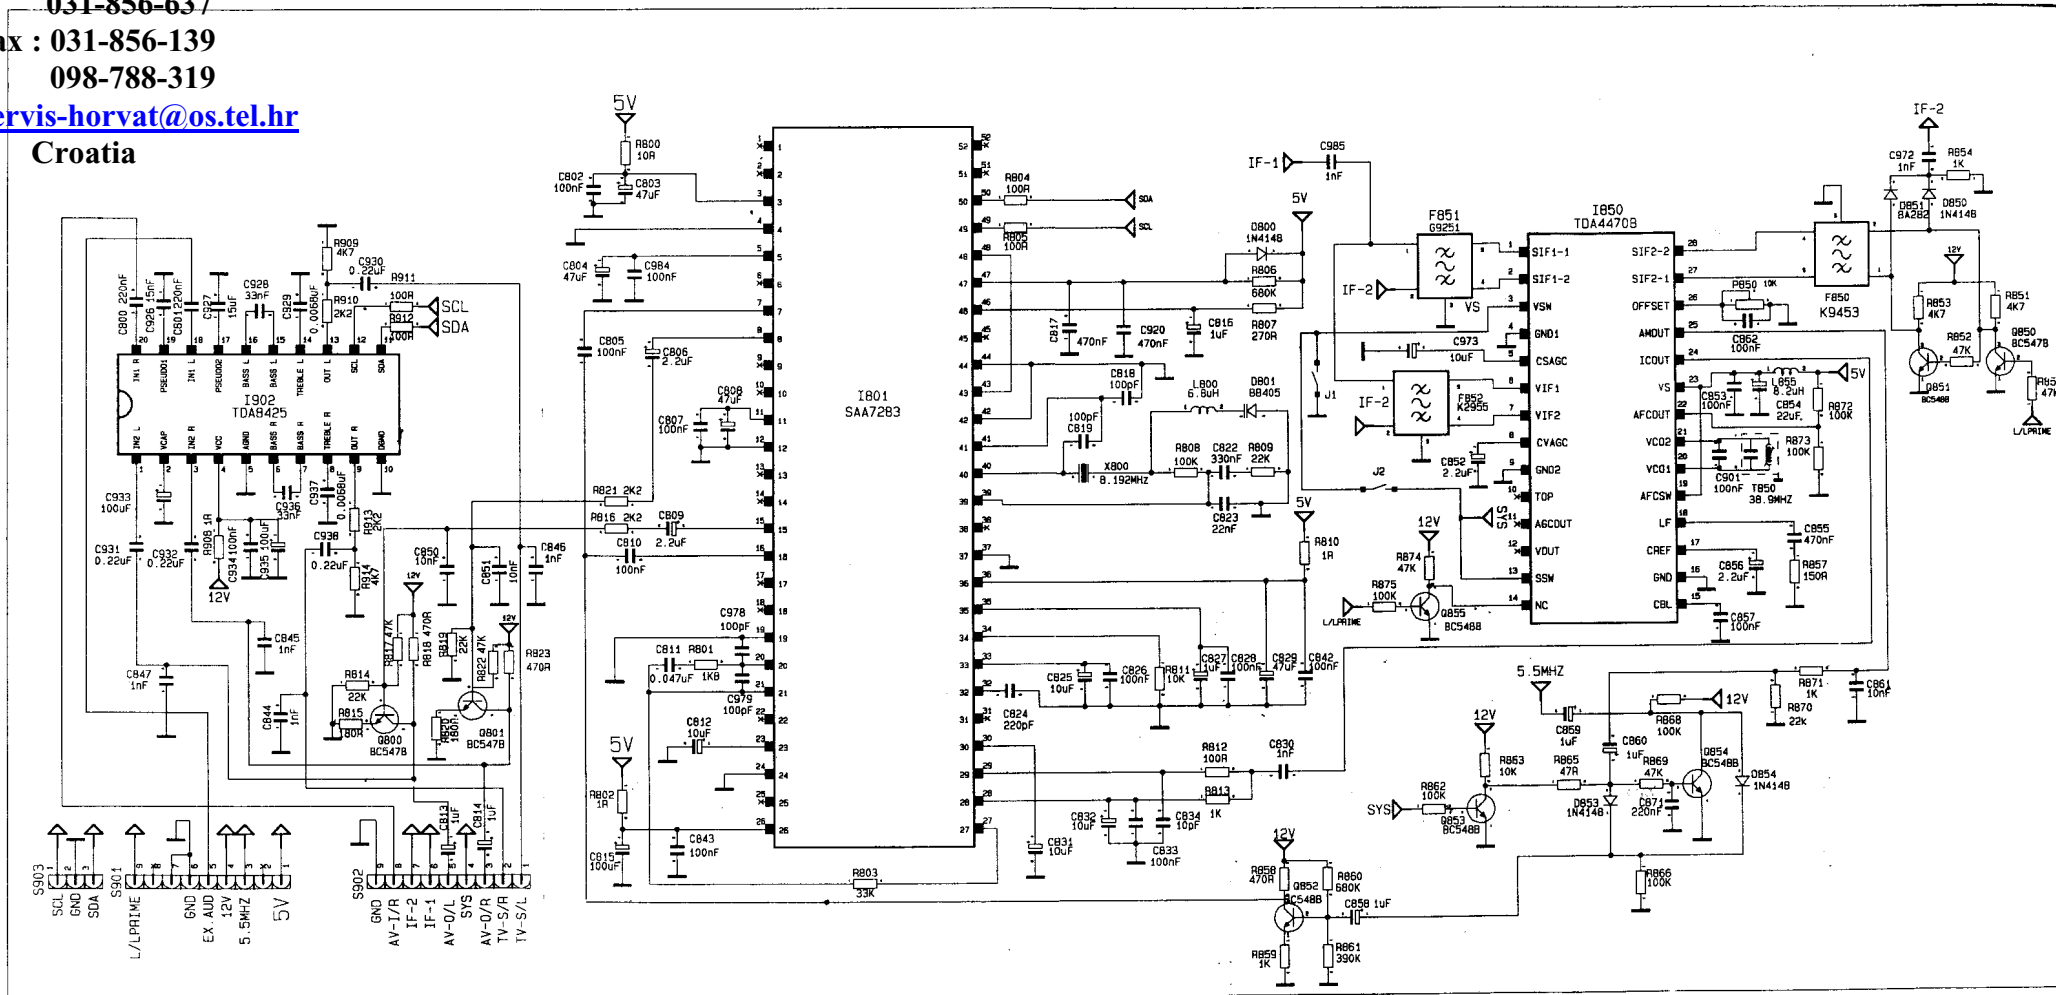

NICAM L BOARD CIRCUIT DIAGRAM / NICAM L BAUSTEIN SCHALTUNGSPLAN

RTV servis Horvat
Kešinci, 31402 Semeljci
Tel: 031-856-637
Tel/fax : 031-856-139
Mob: 098-788-319
rtv-servis-horvat@os.tel.hr
Croatia

www.rtv-horvat-dj.hr

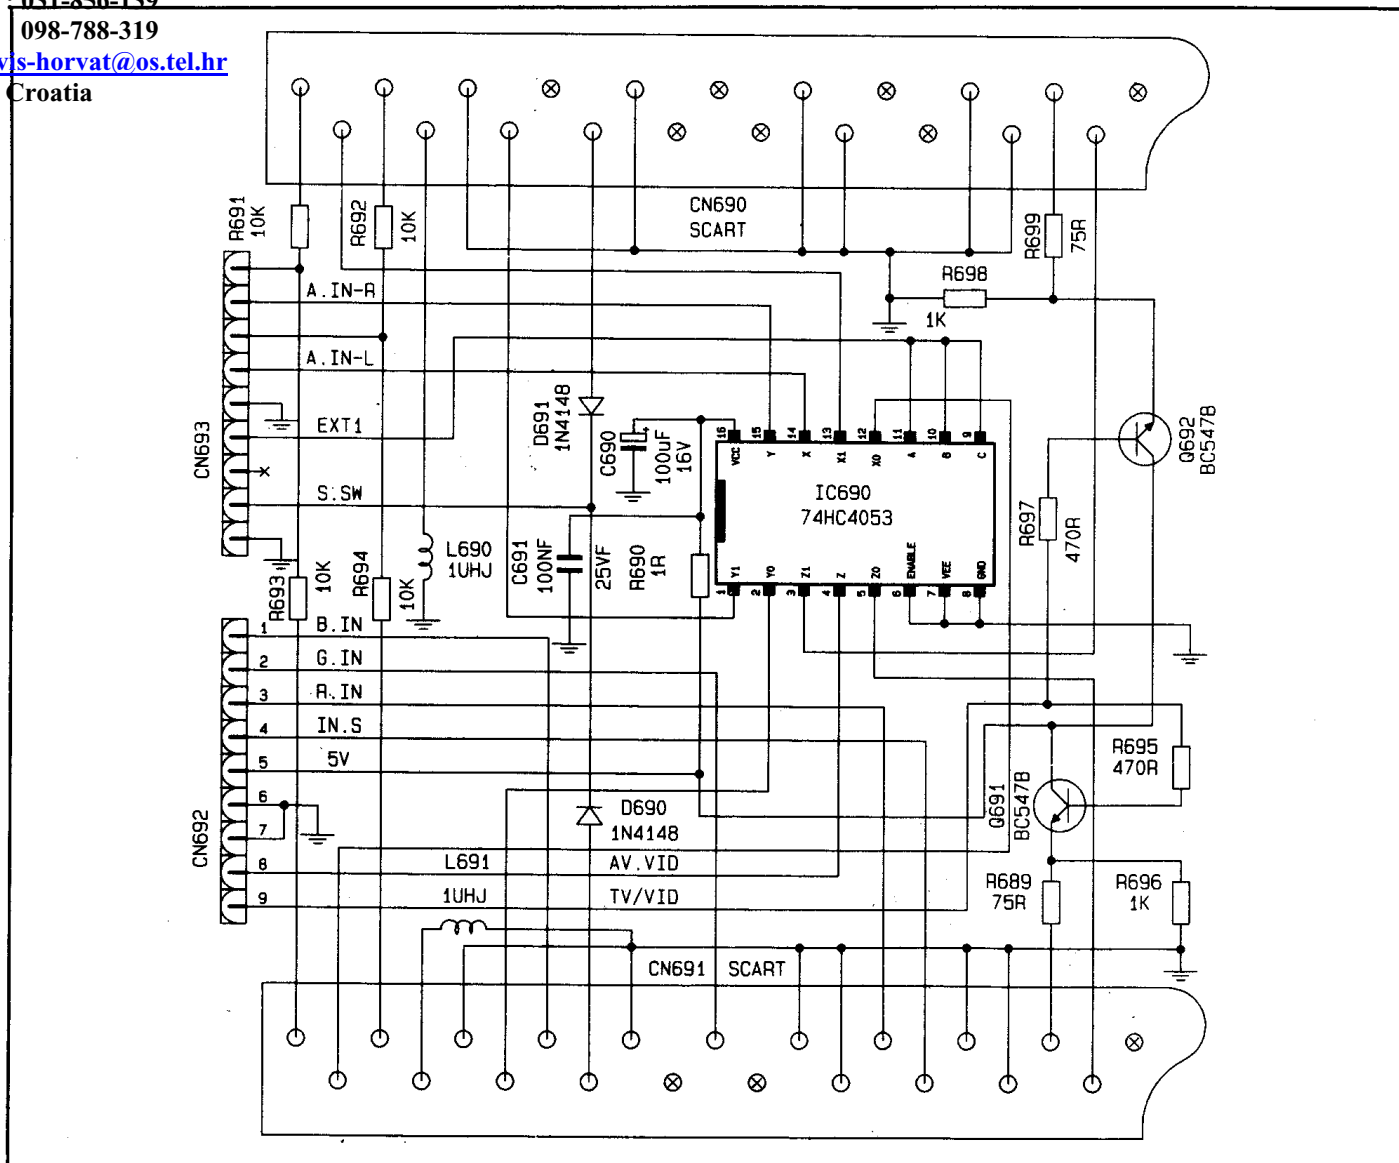

DOUBLE SCART BOARD CIRCUIT DIAGRAM / DOPPEL - SCART BAUSTEIN SCHALTUNGSPLAN